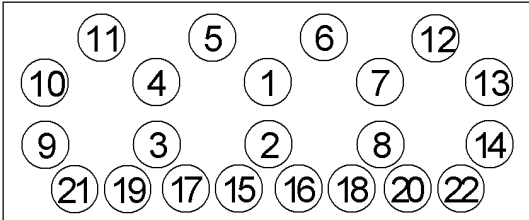


Anziehvorschrift für Zylinderkopf		711.671	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a	
Instructions de serrage pour culasse		PSA	
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
Anziehen/ Tightening/ Serrage/ Apriete	* M 12 (POS. 1-14): 50 Nm * M 10 (POS. 15-22): 35 Nm POS. 1-22: ➤ 120°±5°		
Zeichenerklärung / Explanations / Explication / Explicacion			
* ✱ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Mot. DK5ATE, DJ5, DJ5T 2446 ccm Diesel/Turbo-Diesel 605, Boxer			
ElingKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*711.671*