

Anziehvorschrift für Zylinderkopf		862.622		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a PSA Das Original		
		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
⑦③②⑥⑩ ⑧④①⑤⑨				
Anziehen/ * 20 Nm Tightening/ 40 Nm Serrage/ ➤ 230° Apriete				
Zeichenerklärung / Explanations / Explication / Explicacion				
✳	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
÷ 1,35 mm				
1,4 Ltr. / 4 Zyl. / 66 kW / 90 PS				
Motor: DV4TED4				
C3				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*862.622*	