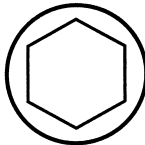
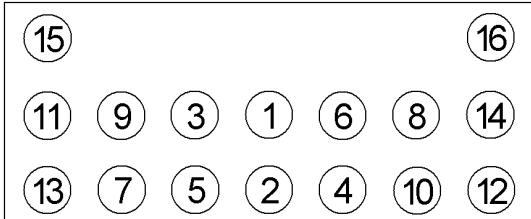


Anziehvorschrift für Zylinderkopf		920.542 passend für / suitable for adaptable à / adaptable a Nissan	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 710.100			
Anziehen/ Tightening/ Serrage/ Apriete		M 12 29 Nm 113 Nm 29 Nm 100° - 105°	
Anziehen/ Tightening/ Serrage/ Apriete		M 8 * 16 - 21 Nm	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ □ ● ➤	neue Zylinderkopf-schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø: 85,5 mm; ½: 1,50 mm			
Mot: RD28T, RD28Ti			
2,8 ltr. 85-95 kW (116-129 PS)			
Patrol 1986-2000			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*920.542*	